im Vertrieb von CAMBOARD Electronics

# Kramer Electronics, Ltd.

# USER MANUAL

## Model:

**VM-114H4C**

***2 Input 1:4 HDMI DA/4x CAT5 Outputs***

www.camboard.de Tel. 07131 911201ce-info@camboard.de
Fax 07131 911203

im Vertrieb von CAMBOARD Electronics


## Contents


| | | |
|---|---|---|
| **1** | **Introduction** | **1** |
| **2** | **Getting Started** | **1** |
| 2.1 | Recycling Kramer Products | 1 |
| 2.2 | Quick Start | 2 |
| **3** | **Overview** | **4** |
| 3.1 | Using Shielded Twisted Pair Cable | 4 |
| 3.2 | About the Power Connect™ Feature | 5 |
| 3.3 | Recommendations for Best Performance | 5 |
| **4** | **Defining the VM-114H4C** | **6** |
| **5** | **Using the VM-114H4C** | **7** |
| 5.1 | Connecting the VM-114H4C | 7 |
| 5.2 | Acquiring the EDID | 8 |
| 5.2.1 | Disabling/Enabling Deep Color Support | 9 |
| 5.3 | Connecting to the VM-114H4C via RS-232 | 9 |
| 5.4 | RS-232, IR Control and Pass-through | 10 |
| 5.4.1 | RS-232 Control and Pass-through Using the VM-114H4C | 10 |
| 5.4.2 | Local IR Control and IR Pass-through Using the VM-114H4C | 10 |
| **6** | **Wiring the Twisted Pair RJ-45 Connectors** | **14** |
| **7** | **Technical Specifications** | **15** |
| **8** | **Default Communication Parameters** | **15** |
| **9** | **Default EDID** | **16** |
| **10** | **Kramer Protocol 2000** | **16** |


## Figures


Figure 1: VM-114H4C Front Panel 6
Figure 2: VM-114H4C Rear Panel 7
Figure 3: Connecting the VM-114H4C 8
Figure 4: VM-114H4C RS-232 Control and Pass-through 10
Figure 5: VM-114H4C IR Control and Pass-through Example One 11
Figure 6: VM-114H4C IR Control and Pass-through Example Two 12
Figure 7: VM-114H4C IR Control and Pass-through Example Three 13
Figure 8: TP Pinout Wiring 14



www.camboard.de Tel. 07131 911201ce-info@camboard.de
Fax 07131 911203

im Vertrieb von CAMBOARD Electronics


## Tables

Table 1: VM-114H4C Front Panel Features 6
Table 2: VM-114H4C Rear Panel Features 7
Table 3: Technical Specifications of the VM-114H4C 15
Table 4: Default Communication Parameters 15
Table 5: Protocol Definitions 16
Table 6: Instruction Codes for Protocol 2000 17


www.camboard.de Tel. 07131 91120 ice-info@camboard.de
Fax 07131 911203

# 1 Introduction

Welcome to Kramer Electronics! Since 1981, Kramer Electronics has been providing a world of unique, creative, and affordable solutions to the vast range of problems that confront the video, audio, presentation, and broadcasting professional on a daily basis. In recent years, we have redesigned and upgraded most of our line, making the best even better! Our 1,000-plus different models now appear in 11 groups[1] that are clearly defined by function.

Congratulations on purchasing your Kramer Desktop **VM-114H4C**, which is ideal for:

- Home theater, presentation and multimedia applications
- Rental and staging

The package includes the following items:

- **VM-114H4C** *2 Input 1:4 HDMI DA/4x CAT5 Outputs*
- Power adapter (12V DC)
- Kramer **RC-IR3** infrared remote control transmitter (including the required batteries and a separate user manual[2])
- This user manual[2]

# 2 Getting Started

We recommend that you:

- Unpack the equipment carefully and save the original box and packaging materials for possible future shipment
- Review the contents of this user manual
- Use Kramer high performance high resolution cables[3]
- Do not secure the cables in tight bundles or roll the slack into tight coils

## 2.1 Recycling Kramer Products

The Waste Electrical and Electronic Equipment (WEEE) Directive 2002/96/EC aims to reduce the amount of WEEE sent for disposal to landfill or incineration by requiring it to be collected and recycled. To comply with the WEEE Directive, Kramer Electronics has made arrangements with the European Advanced

1 GROUP 1: Distribution Amplifiers; GROUP 2: Switchers and Routers; GROUP 3: Control Systems; GROUP 4: Format/Standards Converters; GROUP 5: Range Extenders and Repeaters; GROUP 6: Specialty AV Products; GROUP 7: Scan Converters and Scalers; GROUP 8: Cables and Connectors; GROUP 9: Room Connectivity; GROUP 10: Accessories and Rack Adapters; GROUP 11: Sierra Products

2 Download up-to-date Kramer user manuals from http://www.kramerelectronics.com

3 The complete list of Kramer cables is available from http://www.kramerelectronics.com


www.camboard.de Tel. 07131 911201ce-info@camboard.de
Fax 07131 911203

Recycling Network (EARN) and will cover any costs of treatment, recycling and recovery of waste Kramer Electronics branded equipment on arrival at the EARN facility. For details of Kramer's recycling arrangements in your particular country go to our recycling pages at *http://www.kramerelectronics.com/support/recycling/*.

## 2.2 Quick Start

This quick start chart summarizes the basic setup and operation steps of the **VM-114H4C**.



www.camboard.de Tel. 07131 911201ce-info@camboard.de
Fax 07131 911203

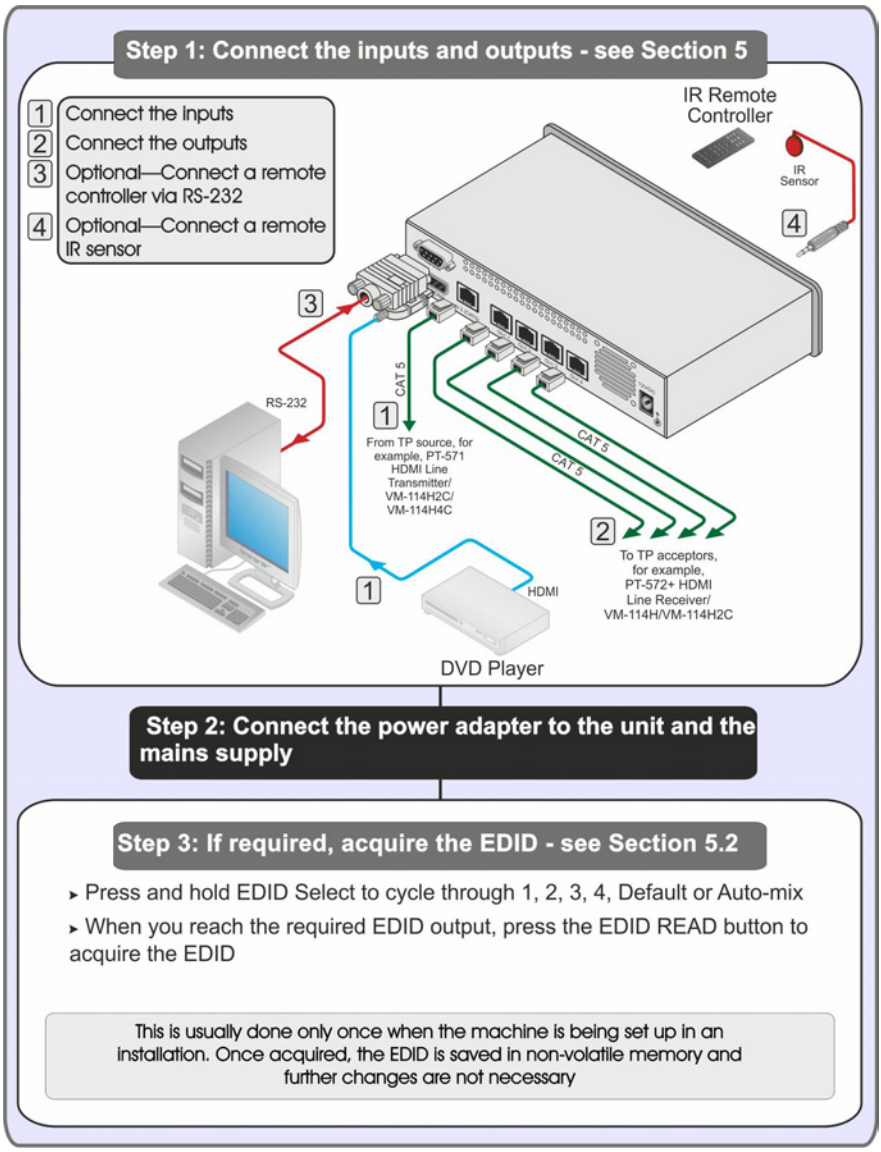
Step 1: Connect the inputs and outputs - see Section 5
1 Connect the inputs
2 Connect the outputs
3 Optional—Connect a remote controller via RS-232
4 Optional—Connect a remote IR sensor
IR Remote Controller
IR Sensor
RS-232
CAT 5
From TP source, for example, PT-571 HDMI Line Transmitter/ VM-114H2C/ VM-114H4C
CAT 5
CAT 5
To TP acceptors, for example, PT-572+ HDMI Line Receiver/ VM-114H/VM-114H2C
HDMI
DVD Player
Step 2: Connect the power adapter to the unit and the mains supply
Step 3: If required, acquire the EDID - see Section 5.2
▸ Press and hold EDID Select to cycle through 1, 2, 3, 4, Default or Auto-mix
▸ When you reach the required EDID output, press the EDID READ button to acquire the EDID
This is usually done only once when the machine is being set up in an installation. Once acquired, the EDID is saved in non-volatile memory and further changes are not necessary


www.camboard.de Tel. 07131 911201ce-info@camboard.de
Fax 07131 911203

# 3 Overview

The high quality **VM-114H4C** is a switcher/distribution amplifier for HDMI and TP (Twisted Pair) signals. It reclocks and equalizes one of two selectable input signals and distributes it to four TP outputs.

In particular, the **VM-114H4C**:

- Supports up to 1.65Gbps bandwidth per graphic channel (DGKat)[1]
- Can read and store in non-volatile memory the default EDID or the EDID[2] block from one or a mix[3] of the output display devices, so it can then provide the EDID information to the source even if the display device is not connected
- Features I-EDIDPro™ Kramer Intelligent EDID Processing™ – Intelligent EDID handling & processing algorithm ensures Plug and Play operation for HDMI systems
- Supports 3D Pass-through, Deep Color[4], x.v.Color™ and uncompressed audio channels (Dolby TrueHD, DTS-HD)
- Is HDCP compliant
- Features LEDs indicating the selected input and active output
- Supports IR remote control and has a remote IR 3.5mm mini jack
- Is 12V DC fed and is housed in a Kramer Desktop enclosure

## 3.1 Using Shielded Twisted Pair Cable

Kramer engineers have developed special twisted pair cables to best match our digital twisted pair products; the Kramer: **BC-DGKat524** (CAT 5 24 AWG), the Kramer **BC-DGKat623** (CAT 6 23 AWG cable), and the Kramer **BC-DGKat7a23** (CAT 7a 23 AWG cable). These specially built cables significantly outperform regular CAT 5/CAT 6 /CAT 7a cables.

The **VM-114H4C** supports a range of up to 90m (295ft) at 1080i/SXGA or up to 30m (98ft) at 1080p/UXGA on shielded **BCP-DGKat524** cable; 90m (295ft) at 1080i or up to 70m (230ft) at 1080p/UXGA on shielded **BCP-DGKat623** cable.

You can daisy-chain up to six devices with the maximum overall distance between the first and last devices being cumulative and limited by the cable type used.

1 Suitable for resolutions up to UXGA at 60Hz and for all HD resolutions

2 EDID is Extended Display Identification Data (see Section 3.4 for a more detailed definition)

3 The EDID acquired is a weighted average of all the connected outputs. For example, if several displays with different resolutions are connected to the outputs, the acquired EDID supports all the resolutions, as well as other parameters included in the EDID

4 On the HDMI input



www.camboard.de Tel. 07131 911201ce-info@camboard.de
Fax 07131 911203

## 3.2 About the Power Connect™ Feature

The Power Connect™ feature here means that only the transmitter needs to be connected to a power source when the devices are within 90m (270ft) of each other. The Power Connect™ feature applies as long as the cable can carry power and the distance does not exceed 90m on standard CAT 5 cable. For longer distances, heavier gauge cable should be used[1].

**Warning:** Using a TP cable that is incorrectly wired will cause permanent damage to the device

## 3.3 Recommendations for Best Performance

To achieve the best performance:

- Connect only good quality connection cables, thus avoiding interference, deterioration in signal quality due to poor matching, and elevated noise levels (often associated with low quality cables)
- Do not secure the cables in tight bundles or roll the slack into tight coils
- Avoid interference from neighboring electrical appliances and position your **VM-114H4C** away from moisture, excessive sunlight and dust

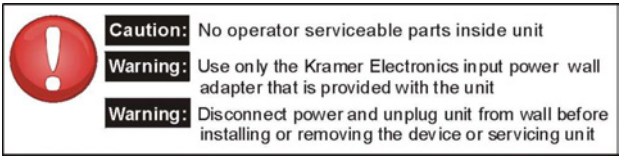
Caution: No operator serviceable parts inside unit
Warning: Use only the Kramer Electronics input power wall adapter that is provided with the unit
Warning: Disconnect power and unplug unit from wall before installing or removing the device or servicing unit

1 CAT 5 cable is still suitable for the video/audio transmission, but not for feeding the power at these distances


www.camboard.de Tel. 07131 911201ce-info@camboard.de
Fax 07131 911203

# 4 Defining the VM-114H4C

Figure 1 and Table 1 define the front panel the **VM-114H4C**.

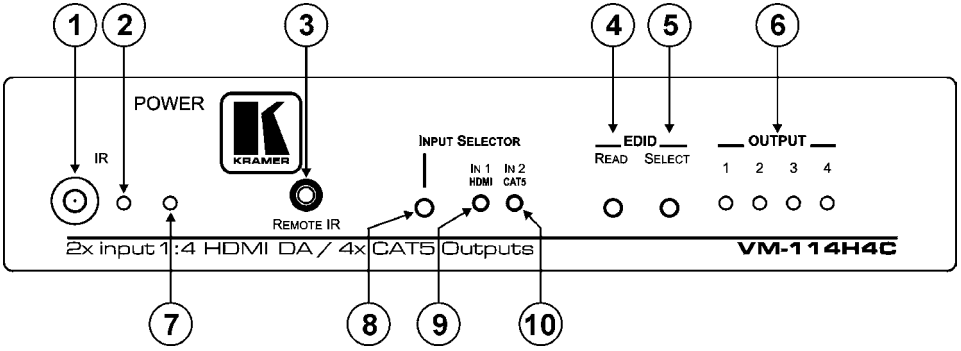


*Figure 1: VM-114H4C Front Panel*

*Table 1: VM-114H4C Front Panel Features*

| # | Feature | | Function |
|---|---|---|---|
| 1 | *IR* Remote Control Sensor | | Sensor for the remote control IR transmitter |
| 2 | *IR* LED | | Lights yellow when receiving signals from the IR remote control transmitter |
| 3 | *REMOTE IR* 3.5mm Mini Jack | | Connect to a remote infrared sensor |
| 4 | *EDID* Buttons | *READ* Button | Press (when one of the input LEDs is flashing to indicate a selected input) to read the selected EDID (see Section 5.2) |
| 5 | | *SELECT* Button | Press repeatedly to cycle through the inputs to select an input from which to read the EDID. The relevant LED flashes (see Section 5.2) |
| 6 | *OUTPUT 1~4* LEDS | | The relevant LED lights green when an acceptor is connected to the output[1] |
| 7 | *POWER* LED | | Lights green when the unit receives power |
| 8 | *INPUT SELECTOR* Button | | Press to select an input. The relevant input LED lights |
| 9 | *IN1 (HDMI)* LED | Input LEDs | Lights green when HDMI input 1 is selected |
| 10 | *IN2 (CAT5)* LED | | Lights green when the TP input 2 is selected |

1 Also lights or flashes during EDID setup (see Section 5.2)



www.camboard.de Tel. 07131 911201ce-info@camboard.de
Fax 07131 911203

Figure 2 and Table 2 define the rear panel **VM-114H4C**.

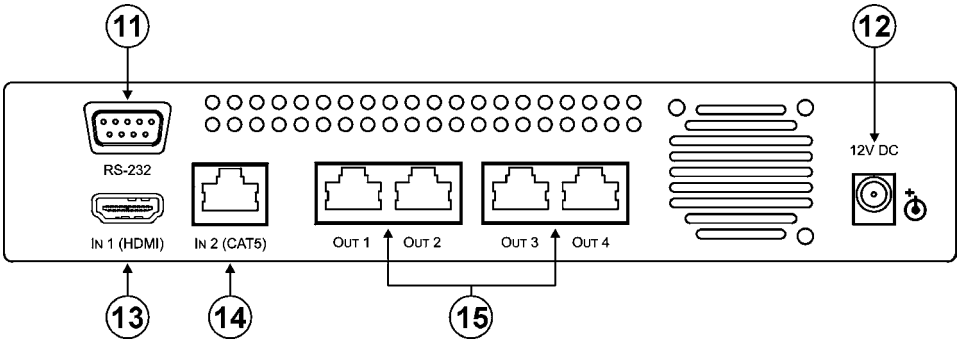


*Figure 2: VM-114H4C Rear Panel*

*Table 2: VM-114H4C Rear Panel Features*

| # | Feature | | Function |
|---|---|---|---|
| 11 | *RS-232* 9-pin D-sub (F) Connector | | Connect to a PC or remote controller |
| 12 | *12V DC* Power Connector | | Connect to the +12V DC power adapter, center pin positive |
| 13 | *IN1 (HDMI)* Input HDMI Connector | Inputs | Connect to an HDMI source |
| 14 | *IN2 (CAT5)* Input RJ-45 Connector | | Connect to a TP source (for example, PT-571 HDMI Line Transmitter, VM-114H2C or VM-114H4C) |
| 15 | *OUT 1* | TP RJ-45 Output Connectors | Connect to the TP acceptors (for example, PT-572+ HDMI Line Receiver, VM-114H or VM-114H4C) |
| | *OUT 2* | | |
| | *OUT 3* | | |
| | *OUT 4* | | |

# 5 Using the VM-114H4C

This section describes how to connect the **VM-114H4C** (see Section 5.1) and how to use the EDID SELECT button (see Section 5.2).

## 5.1 Connecting the VM-114H4C

**To connect[1] the VM-114H4C as illustrated in the example in Figure 3:**

1. Connect the HDMI source (for example, a DVD player) to the IN 1 (HDMI) connector.
2. Connect the TP source (for example, a **PT-571** *HDMI Line Transmitter*[2], another **VM-114H2C** or a **VM-1114H4C**) to the IN 2 (CAT5) connector.

1 Switch off the power on each device before connecting it to your VM-114H4C. After connecting your VM-114H4C, switch on its power and then switch on the power on each device

2 Another example is the TP-573 Twisted Pair Line Transmitter


www.camboard.de Tel. 07131 911201ce-info@camboard.de
Fax 07131 911203

3. Connect the TP RJ-45 outputs to up to four TP acceptors (for example, the **PT-572+** *Line Receiver*[1], the **VM-114H** or the **VM-114H2C**).
4. (Optional) Connect the front panel remote IR 3.5mm mini jack to the remote IR sensor.
5. (Optional) Connect a PC via RS-232 to the RS-232 port on the **VM-114H4C** (see Section 5.3).

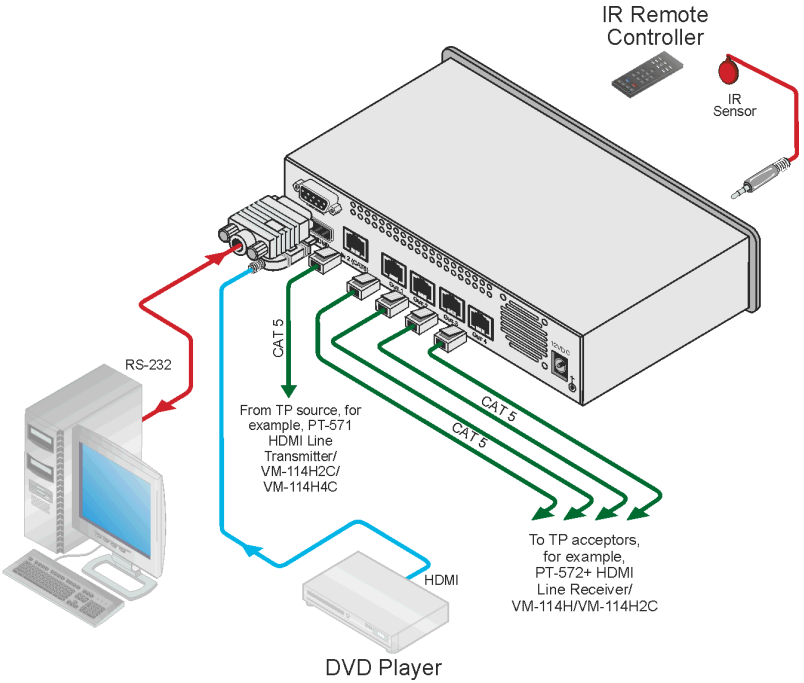


*Figure 3: Connecting the VM-114H4C*

## 5.2 Acquiring the EDID

Each input on the **VM-114H4C** has a factory default EDID loaded[2] (see Section 9). This lets you connect the power before having to connect one of the acceptors.

You can acquire the EDID[3] from:

- One output (the relevant output LED flashes)

1 Alternatively the TP-574 Twisted Pair Line Receiver

2 The VM-114H4C reads the EDID, which is stored in the non-volatile memory

3 This is usually done only once, when the machine is being set up in an installation. Once acquired, the EDID is saved in non-volatile memory and further acquisition is not necessary



www.camboard.de Tel. 07131 911201ce-info@camboard.de
Fax 07131 911203

- The default EDID (all output LEDs flash)
- Up to four connected outputs using the Auto-mix Mode[1] (all output LEDs light)

**To acquire the EDID**:

1. Connect the output(s) from which you want to acquire the EDID.
2. Press the EDID SELECT button briefly. The last acquired EDID is indicated by the lit LED (for example, if Output LED 2 is lit, the EDID acquired was from Output 2).
   The device enters the EDID programming mode.
3. Press the EDID SELECT button repeatedly until the required EDID is indicated based on the patterns described above.
4. Press the EDID READ button.
   The relevant LEDs flash in a pattern for a few seconds as follows:
   - Slowly and then no longer lights. The EDID was successfully read
   - Quickly and then no longer lights. The EDID was not read and the default EDID was stored

### 5.2.1 Disabling/Enabling Deep Color Support

You can disable EDID deep color support to prevent signal deterioration when using long twisted pair cables on INPUT 2.

To disable deep color and acquire EDID:

1. Disconnect the power.
2. Connect the output or outputs from which you want to acquire the EDID.
3. Connect the power while pressing the EDID READ button.
4. Perform steps 3 through 5 in Section 5.2.

To enable deep color and acquire EDID:

1. Disconnect the power.
2. Connect the output or outputs from which you want to acquire the EDID.
3. Connect the power while pressing the EDID SELECT button.
4. Perform steps 3 through 5 in Section 5.2.

## 5.3 Connecting to the VM-114H4C via RS-232

You can connect to the **VM-114H4C** via an RS-232 connection using, for example, a PC. Note that a null-modem adapter/connection is not required.

1 The EDID acquired is a weighted average of all the connected outputs. For example, if several displays with different resolutions are connected to the outputs, the acquired EDID supports all the resolutions, as well as other parameters included in the EDID


www.camboard.de Tel. 07131 911201ce-info@camboard.de
Fax 07131 911203

**To connect to the VM-114H4C via RS-232:**

- Connect the RS-232 9-pin D-sub rear panel port on the product unit via a 9-wire straight cable (only pin 2 to pin 2, pin 3 to pin 3, and pin 5 to pin 5 need to be connected) to the RS-232 9-pin D-sub port on your PC

## 5.4 RS-232, IR Control and Pass-through

The **VM-114H4C** can be controlled via RS-232 and infrared. Depending on how the RS-232 and IR connections are configured dictates whether the device will respond to control signals or transparently pass them through to another receiver or transmitter. Three examples in Sections 5.4.2.1, 5.4.2.2 and 5.4.2.3 of various configurations illustrate this functionality.

### 5.4.1 RS-232 Control and Pass-through Using the VM-114H4C

As shown in Figure 3, you can connect a PC (or other serial controller) directly to the **VM-114H4C** to control the **VM-114H4C.**

The **VM-114H4C** also transparently passes bidirectional RS-232 signals over the CAT 5 cable from the **TP-573** transmitter to the **TP-574** receiver. For example, a PC connected to the RS-232 port on the **TP-573** can control an RS-232-controllable device (for example, a projection screen) connected to the **TP-574**.

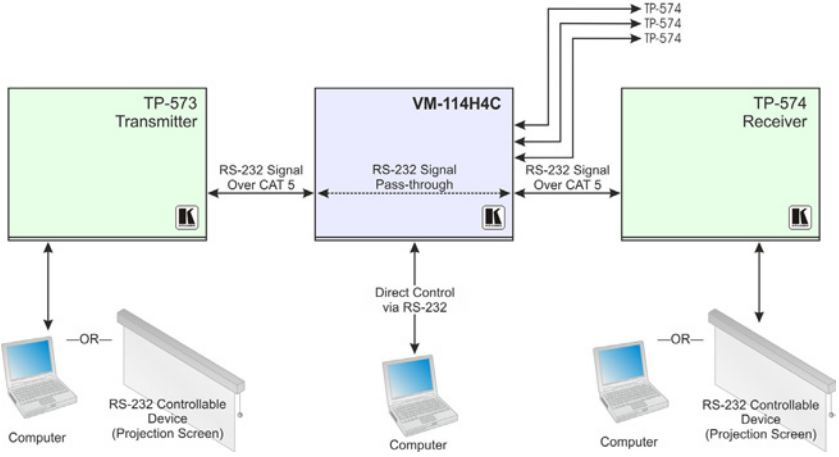


*Figure 4: VM-114H4C RS-232 Control and Pass-through*

### 5.4.2 Local IR Control and IR Pass-through Using the VM-114H4C

The **VM-114H4C** provides an IR sensor and a 3.5mm mini jack for connecting a remote IR emitter or sensor. When the **VM-114H4C** is connected to suitable transmitters and receivers (for example, the **TP-573** and **TP-574)**, the **VM-114H4C** can act as a pass-through for IR control signals, allowing remote control of multiple devices using multiple IR remote controllers.


www.camboard.de Tel. 07131 911201ce-info@camboard.de
Fax 07131 911203

When there is no IR sensor or emitter connected to the IR Remote 3.5mm mini jack, all signals received by the IR sensor on the front panel are passed to the transmitter and receiver bi-directionally over the CAT 5 cable allowing control of remote devices.

When an IR sensor or emitter is connected to the IR Remote 3.5mm mini jack, the connection between the IR sensor on the front panel and the IR on the transmitter/receiver is broken so that any signal received by the IR sensor on the front panel remains local to the **VM-114H4C** and controls only the **VM-114H4C**.

To control any device you need to use the appropriate IR remote controller, for example, the Kramer remote controller controls Kramer devices, the LCD remote controller controls the LCD display and so on, as shown in the following examples.

The following examples illustrate just three of the possible ways of connecting the **VM-114H4C** to provide local and remote IR control.

#### 5.4.2.1 IR Local Control and Pass-through Example One

The configuration is shown in Figure 5.

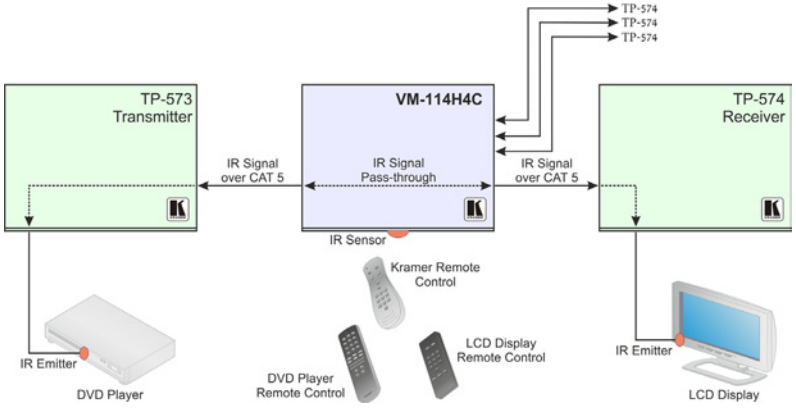


*Figure 5: VM-114H4C IR Control and Pass-through Example One*

A DVD player is connected to the **TP-573** transmitter via an IR emitter.

An LCD display is connected to the **TP-574** receiver via an IR emitter.

Both the **TP-573** and the **TP-574** are connected to the **VM-114H4C** via TP cabling.

Point the appropriate remote control for the device at the **VM-114H4C** IR sensor to control a device.

#### 5.4.2.2 IR Local Control and Pass-through Example Two

The configuration is shown in Figure 6.


www.camboard.de Tel. 07131 911201ce-info@camboard.de
Fax 07131 911203

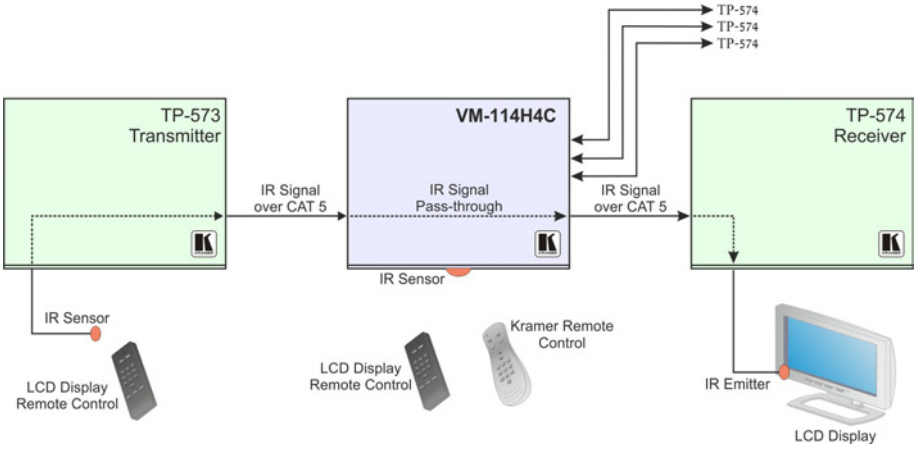


*Figure 6: VM-114H4C IR Control and Pass-through Example Two*

An IR sensor is connected to the **TP-573** transmitter.

An LCD display is connected to the **TP-574** receiver via an IR emitter.

Both the **TP-573** and the **TP-574** are connected to the **VM-114H4C** via TP cabling.

Point the LCD display remote control either at the **TP-573** IR sensor or at the **VM-114H4C** IR sensor to control the LCD display. Point the Kramer remote control at the **VM-114H4C** IR sensor to control the **VM-114H4C**.



www.camboard.de Tel. 07131 911201ce-info@camboard.de
Fax 07131 911203

#### 5.4.2.3 IR Local Control and Pass-through Example Three

The configuration is shown in Figure 7.

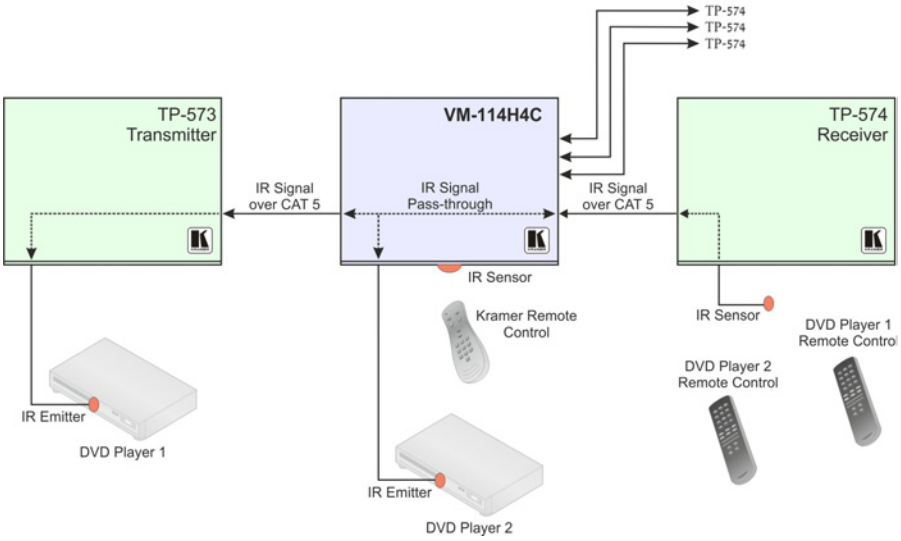


*Figure 7: VM-114H4C IR Control and Pass-through Example Three*

The first DVD player (player 1) is connected to the **TP-573** transmitter via an IR emitter.

The second DVD player (player 2) is connected to the **VM-114H4C** via an IR emitter.

An IR sensor is connected to the **TP-574** receiver.

Both the **TP-573** and the **TP-574** are connected to the **VM-114H4C** via TP cabling.

To control DVD player 1, point the DVD player 1 IR remote control at the **TP-574** IR sensor. To control DVD player 2, point the DVD player 2 IR remote control at the **TP-574** IR sensor. Point the Kramer remote control at the **VM-114H4C** IR sensor to control the **VM-114H4C**.


www.camboard.de Tel. 07131 911201ce-info@camboard.de
Fax 07131 911203

# 6 Wiring the Twisted Pair RJ-45 Connectors

This section defines the TP pinout, using a straight pin-to-pin cable with RJ-45 connectors.

Note, that the cable Ground shielding must be connected/soldered to the connector shield.

| EIA /TIA 568B | |
|---|---|
| **PIN** | **Wire Color** |
| 1 | Orange / White |
| 2 | Orange |
| 3 | Green / White |
| 4 | Blue |
| 5 | Blue / White |
| 6 | Green |
| 7 | Brown / White |
| 8 | Brown |
| | |
| Pair 1 | 4 and 5 |
| Pair 2 | 1 and 2 |
| Pair 3 | 3 and 6 |
| Pair 4 | 7 and 8 |

*Figure 8: TP Pinout Wiring*

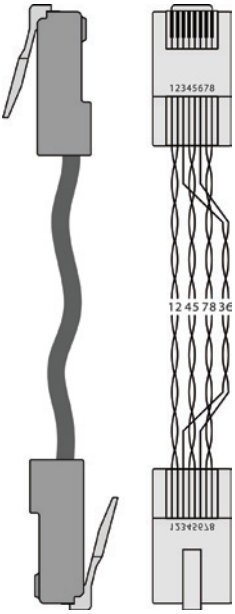

# 7 Technical Specifications

Table 3 lists the technical specifications[1] of the **VM-114H4C**.

*Table 3: Technical Specifications of the VM-114H4C*

| | |
|---|---|
| INPUTS: | 1 HDMI Connector<br>1 TP on an RJ-45 Connector |
| OUTPUTS: | 4 TP on RJ-45 Connectors |
| BANDWIDTH: | Supports up to 1.65Gbps bandwidth per graphic channel (DGKat) |
| COMPLIANCE WITH HDMI STANDARD: | Supports HDMI and HDCP |
| CONTROLS: | Input select button, EDID select button, panel lock button, RS-232, local and remote IR controls |
| INDICATOR LEDs: | IR communication, Power, IN 1 HDMI, IN 2 CAT5, OUTPUT 1, 2, 3 and 4 |
| POWER CONSUMPTION: | 12V DC, 2A |
| OPERATING TEMPERATURE: | 0° to +40°C (32° to 104°F) |
| STORAGE TEMPERATURE: | –40° to +70°C (–40° to 158°F) |
| HUMIDITY: | 10% to 90%, RHL non-condensing |
| DIMENSIONS: | 21.5cm x 16.3cm x 4.4cm (8.5in x 6.4in x 1.7in) W, D, H |
| WEIGHT: | 0.9kg (1.98lbs) approx. |
| ACCESSORIES: | Power supply, RC-IR3 infrared remote control transmitter |
| OPTIONS: | HDMI/HDMI male to male cables, RK-1 19" rack adapter |

# 8 Default Communication Parameters

Table 4 lists the default communication parameters for the **VM-114H4C**.

*Table 4: Default Communication Parameters*

| **RS-232** | |
|---|---|
| **Protocol 2000** | |
| Baud Rate: | 9600 |
| Data Bits: | 8 |
| Stop Bits: | 1 |
| Parity: | None |
| Command Format: | HEX |
| Example (Output 1 to Input 1): | 0x01, 0x81, 0x81, 0x81 |

1 Specifications are subject to change without notice


www.camboard.de Tel. 07131 911201ce-info@camboard.de
Fax 07131 911203

# 9 Default EDID

The factory default EDID is listed below.

```
Monitor
  Model name..... VM114H4C
  Manufacturer..... KRM
  Plug and Play ID..... KRM0114
  Serial number..... 505-707455010
  Manufacture date..... 2009, ISO week 10
  ---------------------------
  EDID revision..... 1.3
  Input signal type..... Digital
  Color bit depth..... Undefined
  Display type..... RGB color
  Screen size..... 520 x 320 mm (24.0 in)
  Power management..... Standby, Suspend, Active off/sleep
  Extension blocs..... 1 (CEA-EXT)
  ---------------------------
  DDC/CI..... n/a

Color characteristics
  Default color space..... Non-sRGB
  Display gamma..... 2.20
  Red chromaticity..... Rx 0.674 - Ry 0.319
  Green chromaticity..... Gx 0.188 - Gy 0.706
  Blue chromaticity..... Bx 0.148 - By 0.064
  White point (default).... Wx 0.313 - Wy 0.329
  Additional descriptors... None

Timing characteristics
  Horizontal scan range.... 30-83kHz
  Vertical scan range..... 56-76Hz
  Video bandwidth..... 170MHz
  CVT standard..... Not supported
  GTF standard..... Not supported
  Additional descriptors... None
  Preferred timing..... Yes
  Native/preferred timing.. 1280x720p at 60Hz (16:10)
    Modeline..... "1280x720" 74.250 1280 1390 1430 1650 720 725 730 750 +hsync +vsync

Standard timings supported
     720 x 400p at 70Hz - IBM VGA
     640 x 480p at 60Hz - IBM VGA
     640 x 480p at 75Hz - VESA
     800 x 600p at 60Hz - VESA
     800 x 600p at 75Hz - VESA
    1024 x 768p at 60Hz - VESA
    1024 x 768p at 75Hz - VESA
    1280 x 1024p at 75Hz - VESA
    1280 x 1024p at 60Hz - VESA STD
    1600 x 1200p at 60Hz - VESA STD
    1152 x 864p at 75Hz - VESA ST
```

# 10 Kramer Protocol 2000

This RS-232 communication protocol uses four bytes of information as defined below. The default data rate is 9600 baud, with no parity, 8 data bits and 1 stop bit.

*Table 5: Protocol Definitions*

| MSB | | | | | | | LSB |
|---|---|---|---|---|---|---|---|
| | **DESTI-NATION** | **INSTRUCTION** | | | | | |
| 0 | D | N5 | N4 | N3 | N2 | N1 | N0 |
| 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |


www.camboard.de Tel. 07131 911201ce-info@camboard.de
Fax 07131 911203

1st byte

| | INPUT | | | | | | |
|---|---|---|---|---|---|---|---|
| 1 | I6 | I5 | I4 | I3 | I2 | I1 | I0 |
| 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |

2nd byte

| | OUTPUT | | | | | | |
|---|---|---|---|---|---|---|---|
| 1 | O6 | O5 | O4 | O3 | O2 | O1 | O0 |
| 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |

3rd byte

| | | | MACHINE NUMBER | | | | |
|---|---|---|---|---|---|---|---|
| 1 | OVR | X | M4 | M3 | M2 | M1 | M0 |
| 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |

4th byte

1st BYTE: Bit 7 – Defined as 0.
D – "DESTINATION": 0 - for sending information to the switchers (from the PC);
1 - for sending to the PC (from the switcher).
N5…N0 – "INSTRUCTION"
The function that is to be performed by the switcher(s) is defined by the INSTRUCTION (6 bits). Similarly, if a function is performed via the machine's keyboard, then these bits are set with the INSTRUCTION NO., which was performed. The instruction codes are defined according to the table below (INSTRUCTION NO. is the value to be set for N5…N0).

2nd BYTE: Bit 7 – Defined as 1.
I6…I0 – "INPUT".
When switching (ie. instruction codes 1 and 2), the INPUT (7 bits) is set as the input number which is to be switched. Similarly, if switching is done via the machine's front-panel, then these bits are set with the INPUT NUMBER which was switched. For other operations, these bits are defined according to the table.

3rd BYTE: Bit 7 – Defined as 1.
O6…O0 – "OUTPUT".
When switching (ie. instruction codes 1 and 2), the OUTPUT (7 bits) is set as the output number which is to be switched. Similarly, if switching is done via the machine's front-panel, then these bits are set with the OUTPUT NUMBER which was switched. For other operations, these bits are defined according to the table.

4th BYTE: Bit 7 – Defined as 1.
Bit 5 – Don't care.
OVR – Machine number override.
M4…M0 – MACHINE NUMBER.
Used to address machines in a system via their machine numbers. When several machines are controlled from a single serial port, they are usually configured together with each machine having an individual machine number. If the OVR bit is set, then all machine numbers will accept (implement) the command, and the addressed machine will reply.
For a single machine controlled via the serial port, always set M4…M0 = 1, and make sure that the machine itself is configured as MACHINE NUMBER = 1.

*Table 6: Instruction Codes for Protocol 2000*

Note: All values in the table are decimal, unless otherwise stated.

| INSTRUCTION | | DEFINITION FOR SPECIFIC INSTRUCTION | | NOTE |
|---|---|---|---|---|
| # | DESCRIPTION | INPUT | OUTPUT | |
| 1 | SWITCH VIDEO | Set equal to video input which is to be switched (0 = disconnect) | Set equal to video output which is to be switched (0 = to all the outputs) | 2 |
| 61 | IDENTIFY MACHINE | 1 - video machine name<br>3 - video software version<br>9 - protocol 2000 version | 0 - Request first 4 digits<br>1 - Request first suffix<br>2 - Request second suffix<br>3 - Request third suffix<br>10 - Request first prefix<br>11 - Request second prefix<br>12 - Request third prefix | 13 |


www.camboard.de Tel. 07131 911201ce-info@camboard.de
Fax 07131 911203

| INSTRUCTION | | DEFINITION FOR SPECIFIC INSTRUCTION | | NOTE |
|---|---|---|---|---|
| # | DESCRIPTION | INPUT | OUTPUT | |
| 62 | DEFINE MACHINE | 1 - number of inputs<br>2 - number of outputs | 1 - for video<br>2 - for audio | 14 |

NOTES on the above table:
NOTE 2 - These are bi-directional definitions. That is, if the switcher receives the code, it will perform the instruction; and if the instruction is performed (due to a keystroke operation on the front panel), then these codes are sent. For example, if the HEX code
01 85 88 83
was sent from the PC, then the switcher (machine 3) will switch input 5 to output 8. If the user switched input 1 to output 7 via the front panel keypad, then the switcher will send HEX codes:
41 81 87 83
to the PC.
When the PC sends one of the commands in this group to the switcher, then, if the instruction is valid, the switcher replies by sending to the PC the same four bytes that it was sent (except for the first byte, where the DESTINATION bit is set high).

NOTE 13 - This is a request to identify the switcher/s in the system. If the OUTPUT is set as 0, and the INPUT is set as 1, 2, 5 or 7, the machine will send its name. The reply is the decimal value of the INPUT and OUTPUT. For example, for a 2216, the reply to the request to send the audio machine name would be (HEX codes):
7D 96 90 81 (i.e. 128dec+ 22dec for 2nd byte, and 128dec+ 16dec for 3rd byte).

If the request for identification is sent with the INPUT set as 3 or 4, the appropriate machine will send its software version number. Again, the reply would be the decimal value of the INPUT and OUTPUT - the INPUT representing the number in front of the decimal point, and the OUTPUT representing the number after it. For example, for version 3.5, the reply to the request to send the version number would be (HEX codes):
7D 83 85 81 (i.e. 128dec+ 3dec for 2nd byte, 128dec+ 5dec for 3rd byte).

If the OUTPUT is set as 1, then the ASCII coding of the lettering following the machine's name is sent. For example, for the VS-7588YC, the reply to the request to send the first suffix would be (HEX codes):
7D D9 C3 81 (i.e. 128dec+ ASCII for "Y"; 128dec+ ASCII for "C").

NOTE 14 - The number of inputs and outputs refers to the specific machine which is being addressed, not to the system. For example, if six 16X16 matrices are configured to make a 48X32 system (48 inputs, 32 outputs), the reply to the HEX code
3E 82 81 82 (ie. request the number of outputs)
would be HEX codes
7E 82 90 82
ie. 16 outputs


www.camboard.de Tel. 07131 911201ce-info@camboard.de
Fax 07131 911203

## LIMITED WARRANTY

The warranty obligations of Kramer Electronics for this product are limited to the terms set forth below:

**What is Covered**

This limited warranty covers defects in materials and workmanship in this product.

**What is Not Covered**

This limited warranty does not cover any damage, deterioration or malfunction resulting from any alteration, modification, improper or unreasonable use or maintenance, misuse, abuse, accident, neglect, exposure to excess moisture, fire, improper packing and shipping (such claims must be presented to the carrier), lightning, power surges, or other acts of nature. This limited warranty does not cover any damage, deterioration or malfunction resulting from the installation or removal of this product from any installation, any unauthorized tampering with this product, any repairs attempted by anyone unauthorized by Kramer Electronics to make such repairs, or any other cause which does not relate directly to a defect in materials and/or workmanship of this product. This limited warranty does not cover cartons, equipment enclosures, cables or accessories used in conjunction with this product.

Without limiting any other exclusion herein, Kramer Electronics does not warrant that the product covered hereby, including, without limitation, the technology and/or integrated circuit(s) included in the product, will not become obsolete or that such items are or will remain compatible with any other product or technology with which the product may be used.

**How Long Does this Coverage Last**

Seven years as of this printing; please check our Web site for the most current and accurate warranty information.

**Who is Covered**

Only the original purchaser of this product is covered under this limited warranty. This limited warranty is not transferable to subsequent purchasers or owners of this product.

**What Kramer Electronics will do**

Kramer Electronics will, at its sole option, provide one of the following three remedies to whatever extent it shall deem necessary to satisfy a proper claim under this limited warranty:

1. Elect to repair or facilitate the repair of any defective parts within a reasonable period of time, free of any charge for the necessary parts and labor to complete the repair and restore this product to its proper operating condition. Kramer Electronics will also pay the shipping costs necessary to return this product once the repair is complete.
2. Replace this product with a direct replacement or with a similar product deemed by Kramer Electronics to perform substantially the same function as the original product.
3. Issue a refund of the original purchase price less depreciation to be determined based on the age of the product at the time remedy is sought under this limited warranty.

**What Kramer Electronics will not do Under This Limited Warranty**

If this product is returned to Kramer Electronics or the authorized dealer from which it was purchased or any other party authorized to repair Kramer Electronics products, this product must be insured during shipment, with the insurance and shipping charges prepaid by you. If this product is returned uninsured, you assume all risks of loss or damage during shipment. Kramer Electronics will not be responsible for any costs related to the removal or re-installation of this product from or into any installation. Kramer Electronics will not be responsible for any costs related to any setting up this product, any adjustment of user controls or any programming required for a specific installation of this product.

**How to Obtain a Remedy under this Limited Warranty**

To obtain a remedy under this limited warranty, you must contact either the authorized Kramer Electronics reseller from whom you purchased this product or the Kramer Electronics office nearest you. For a list of authorized Kramer Electronics resellers and/or Kramer Electronics authorized service providers, please visit our web site at www.kramerelectronics.com or contact the Kramer Electronics office nearest you.

In order to pursue any remedy under this limited warranty, you must possess an original, dated receipt as proof of purchase from an authorized Kramer Electronics reseller. If this product is returned under this limited warranty, a return authorization number, obtained from Kramer Electronics, will be required. You may also be directed to an authorized reseller or a person authorized by Kramer Electronics to repair the product.

If it is decided that this product should be returned directly to Kramer Electronics, this product should be properly packed, preferably in the original carton, for shipping. Cartons not bearing a return authorization number will be refused.

**Limitation on Liability**

THE MAXIMUM LIABILITY OF KRAMER ELECTRONICS UNDER THIS LIMITED WARRANTY SHALL NOT EXCEED THE ACTUAL PURCHASE PRICE PAID FOR THE PRODUCT. TO THE MAXIMUM EXTENT PERMITTED BY LAW, KRAMER ELECTRONICS IS NOT RESPONSIBLE FOR DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR CONDITION, OR UNDER ANY OTHER LEGAL THEORY. Some countries, districts or states do not allow the exclusion or limitation of relief, special, incidental, consequential or indirect damages, or the limitation of liability to specified amounts, so the above limitations or exclusions may not apply to you.

**Exclusive Remedy**

TO THE MAXIMUM EXTENT PERMITTED BY LAW, THIS LIMITED WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL OR WRITTEN, EXPRESS OR IMPLIED. TO THE MAXIMUM EXTENT PERMITTED BY LAW, KRAMER ELECTRONICS SPECIFICALLY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IF KRAMER ELECTRONICS CANNOT LAWFULLY DISCLAIM OR EXCLUDE IMPLIED WARRANTIES UNDER APPLICABLE LAW, THEN ALL IMPLIED WARRANTIES COVERING THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY TO THIS PRODUCT AS PROVIDED UNDER APPICABLE LAW.

IF ANY PRODUCT TO WHICH THIS LIMITED WARRANTY APPLIES IS A "CONSUMER PRODUCT" UNDER THE MAGNUSON-MOSS WARRANTY ACT (15 U.S.C.A. §2301, ET SEQ.) OR OTHER APPICABLE LAW, THE FOREGOING DISCLAIMER OF IMPLIED WARRANTIES SHALL NOT APPLY TO YOU, AND ALL IMPLIED WARRANTIES ON THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR THE PARTICULAR PURPOSE, SHALL APPLY AS PROVIDED UNDER APPLICABLE LAW.

**Other Conditions**

This limited warranty gives you specific legal rights, and you may have other rights which vary from country to country or state to state.

This limited warranty is void if (i) the label bearing the serial number of this product has been removed or defaced, (ii) the product is not distributed by Kramer Electronics or (iii) this product is not purchased from an authorized Kramer Electronics reseller. If you are unsure whether a reseller is an authorized Kramer Electronics reseller, please visit our Web site at www.kramerelectronics.com or contact a Kramer Electronics office from the list at the end of this document.

Your rights under this limited warranty are not diminished if you do not complete and return the product registration form or complete and submit the online product registration form. Kramer Electronics thanks you for purchasing a Kramer Electronics product. We hope it will give you years of satisfaction.

im Vertrieb von CAMBOARD Electronics

**For the latest information on our products and a list of Kramer distributors visit** www.kramerelectronics.com **where updates to this user manual may be found.**
**We welcome your questions, comments and feedback.**

**Caution**

**Safety Warning**:
Disconnect the unit from the power supply before opening/servicing.

P/N: 2900-000645 Rev: 7

**Kramer Electronics, Ltd.**
Web site: www.kramerelectronics.com
E-mail: info@kramerel.com

P/N: 2900-000645 REV 7

www.camboard.de Tel. 07131 911201ce-info@camboard.de
Fax 07131 911203